

Document Title: **STANDARD ROMPAK REMOTE CONTROL CIRCUITRY (24VDC)**

BEFORE PUTTING THE ACTUATOR INTO SERVICE, IT MUST BE INSTALLED AND COMMISSIONED IN ACCORDANCE WITH PUBLICATION E672E INSTALLATION AND MAINTENANCE INSTRUCTIONS.
 UNLESS SPECIFIED WITH ORDER, THE ACTUATOR IS DESPATCHED WITH CONTROL FUNCTION SWITCHES ALL SET TO "OFF" SETTINGS AS LISTED IN PUBLICATION E672E.
 FOR ROMPAK CONTROL AND MONITORING FACILITIES, REFER TO PUBLICATION E621E.

NOTE:
 ACTUATOR REMOTE CONTROL SIGNALS MAY BE INTERNALLY OR EXTERNALLY SUPPLIED.

INTERNALLY SUPPLIED:
 # FIT LINK '#' AS SHOWN AND CONNECT REMOTE CONTROL CONTACTS TO INTERNAL SUPPLY ON TERMINAL 27.

EXTERNALLY SUPPLIED:
 CONNECT CONTROL CONTACTS TO EXTERNAL SUPPLY LIVE/+VE.
 CONNECT SUPPLY ZERO/-VE AS FOLLOWS:-
 TO TERMINAL 20 FOR OPEN OPERATION
 TO TERMINAL 22 FOR STOP/MAINTAIN OPERATION
 TO TERMINAL 24 FOR CLOSE OPERATION
 TO TERMINAL 26 FOR ESD OPERATION

FOR CONTROL FORMS D & E, LINK '#' MUST BE FITTED.
 CONNECT ZERO/-VE AS INDICATED ABOVE.

