Document Title: 125V AC/DC POSITIVE IQ/IQT REMOTE CONTROL CIRCUITRY (24VDC THE INFRA RED SETTING TOOL ENABLES ALL CONFIGURABLE ACTUATOR REMOTE CONTROL SIGNALS MAY BE INTERNALLY OR ACTUATOR SETTINGS TO BE MADE.

BEFORE PUTTING THE ACTUATOR INTO SERVICE, IT MUST BE INSTALLED AND COMMISSIONED IN ACCORDANCE WITH PUBLICATION E170E (IQ) or E175E (IQT) INSTALLATION AND MAINTENANCE INSTRUCTIONS. UNLESS SPECIFIED WITH ORDER, THE ACTUATOR IS DESPATCHED WITH DEFAULT SETTINGS AS LISTED IN PUBLICATION E170E (IQ) or E175E (IQT).

FOR IQ/IQT CONTROL AND MONITORING FACILITIES, REFER TO PUBLICATION E120E.

EXTERNALLY SUPPLIED.

INTERNALLY SUPPLIED:


FIT LINK '#' AS SHOWN AND CONNECT REMOTE CONTROL CONTACTS TO INTERNAL SUPPLY ON TERMINAL 5.

EXTERNALLY SUPPLIED:

CONNECT CONTROL CONTACTS TO EXTERNAL SUPPLY LIVE/+VE. CONNECT SUPPLY ZERO/-VE AS FOLLOWS:-

TO TERMINAL 36 & 31 FOR SUPPLIES UP TO 60VAC or DC TO TERMINAL 40 & 32 FOR SUPPLIES UP TO 125VAC or DC

FOR CONTROL FORMS D & E, LINK '#' MUST BE FITTED. CONNECT ZERO/-VE AS INDICATED ABOVE.

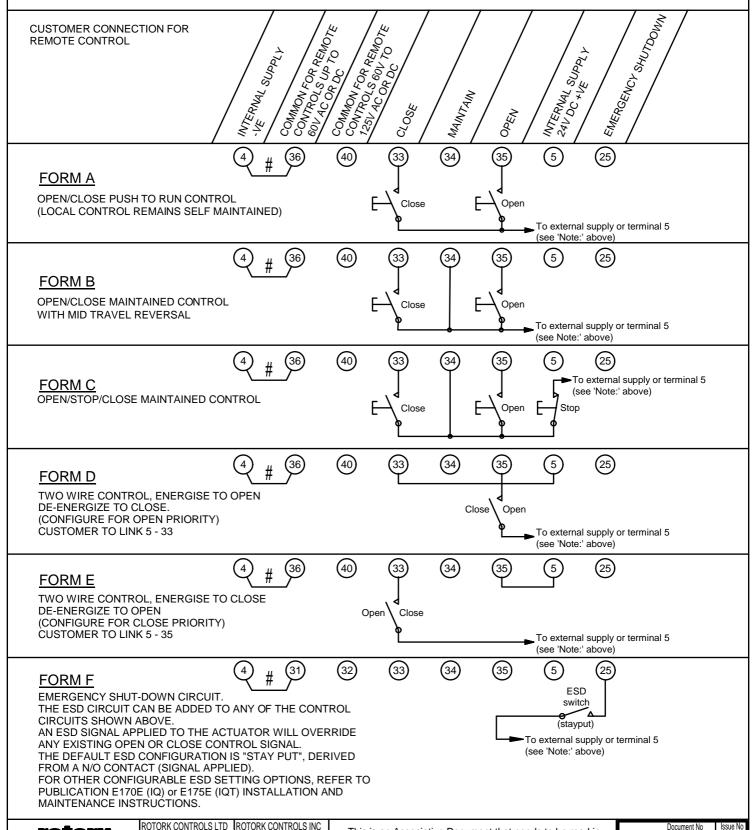

ROTORK CONTROLS LTD BATH, BA1 3JQ ENGLAND

ROTORK CONTROLS INC ROCHESTER NY 14624, USA

This is an Associative Document that needs to be read in conjunction with the appropriate Rotork Wiring Diagram.

RWS308