

Document Title: **NEGATIVE SWITCHING IQ/IQT REMOTE CONTROL CIRCUITRY + STOP RELAY & ISOLATED O/C INPUTS (24VDC)**

THE INFRA RED SETTING TOOL ENABLES ALL CONFIGURABLE ACTUATOR SETTINGS TO BE MADE.

BEFORE PUTTING THE ACTUATOR INTO SERVICE, IT MUST BE INSTALLED AND COMMISSIONED IN ACCORDANCE WITH PUBLICATION E170E (IQ) or E175E (IQT) INSTALLATION AND MAINTENANCE INSTRUCTIONS.  
UNLESS SPECIFIED WITH ORDER, THE ACTUATOR IS DESPATCHED WITH DEFAULT SETTINGS AS LISTED IN PUBLICATION E170E (IQ) or E175E (IQT).

FOR IQ CONTROL AND MONITORING FACILITIES, REFER TO PUBLICATION E120E.

**NOTE:**

ACTUATOR REMOTE CONTROL SIGNALS MAY BE INTERNALLY OR EXTERNALLY SUPPLIED.

**EXTERNALLY SUPPLIED:**

CONNECT CONTROL CONTACTS TO EXTERNAL SUPPLY ZERO/-VE. CONNECT SUPPLY LIVE/+VE AS FOLLOWS:-  
TO TERMINAL 31 FOR SUPPLIES UP TO 60VAC or DC

